

# John Parry 1 - Mic Set

## Contents:

1 x Lapel Microphone

1 x Handheld Microphone



Actual microphones may be slightly different to the photographs.



Any of the mic levels can be reset to its default level by pressing its associated Reset button.

## MICROPHONE CONTROLS

The lectern mic (known as a “Gooseneck”) has a red on/off button at its base. Its volume level can be changed on the touch screen.

Two radio mics are also available from the SIZ desk. They are a lapel (or clip) mic and a handheld traditional looking mic.



Press the Mics Control button on the touch panel to show the mic levels.



increase mic volume



lower mic volume



mute ALL microphones

## HANDHELD MIC

Switch the mic on/off by moving the switch at the bottom of the mic. Red light next to the power switch indicates ON.

## LAPEL MIC

Switch the 'lapel mic' on by pressing the on/ off button on the front. Red light at top of mic indicates ON.

## AVOIDING FEEDBACK\NOISE

- Use the touch panel as described above to press each Mic's associated Reset button. This puts them at their default level where no feedback should be heard.
- The Handheld mic is designed to be used near to your mouth not at arms length with its volume turned up full.
- If using the Lapel mic, do not allow any wires (e.g. the mic wire) to touch its aerial.
- Keep mics away from each other.
- Try to avoid standing below the ceiling speakers or feedback may occur