

Dome 0.01 – Handheld Microphone

To use a handheld microphone, or “mic”, in Dome 0.01 the microphone must have a 3-pin XLR connector which will connect it to the *Revolabs* wireless transmitter.

You may use your own compatible XLR mic (it cannot be one requiring phantom power) or there is one available for loan from the SIZ reception desk.



These instructions use the loan mic as the example.



*Revolabs
wireless transmitter*

On the lectern locate the *Revolabs* transmitter with the 3-hole XLR connector. It should be sitting in the charger base unit. When fully charged its light should be green whilst sitting in the charger base unit.

Remove the transmitter from the base unit and connect it to the microphone making sure the 3 holes align with the microphone's 3 pins.



mute button

The mic is muted and un-muted by pressing the mute button on the *Revolabs* transmitter.

Note that the mic can also be muted independently on the lectern's touch screen.

The mic volume level can be adjusted using the lectern's touch screen. On the touch screen press the **Mics Control** button and adjust the volume level for the **Hand** mic.



When not using the mic or having finished your session, mute the mic, disconnect it from the *Revolabs* transmitter and return the transmitter to the charger base (the light will come on when the transmitter is correctly inserted in the charger base).

To disconnect an XLR microphone there is a silver-coloured locking switch which must be pushed whilst you pull the microphone from the transmitter. Make sure you are pushing the switch down – little force is required to disconnect the microphone provided you are pushing the switch.

Return the loan microphone to the SIZ reception after use.



locking switch