

The AV system is controlled using the touch panel. When not in use the screen goes to sleep (black). Press the touch panel's screen to start or wake-up the touch panel.

### Source Selection



Choose what is displayed on the monitor and the projector by pressing one of the source buttons. Your chosen source button will turn green.

### Projector

To switch the projector On and Off press the Projector button. Please switch Off after use.



**NB:** button these buttons will not respond whilst the projector is warming or cooling

### VOLUME & OTHER CONTROLS



Home: takes you back to the touch panel main screen.



Volume: Use these buttons to lower, raise and mute the sound



Display blank – This button blanks the screen display to the audience.  
NB: this does **not** switch off the projector or the monitor on the lectern



Switches off the lecture system

 
NB: If you have finished with the room, please ensure you also log out and shut down the PC

### LECTURE RECORDING



There is a fixed web camera with a microphone in this room

For more detailed information and training on lecture recording, and live streaming please contact the Skills team ([skills@chi.ac.uk](mailto:skills@chi.ac.uk))



### MICROPHONES



The lectern mic (known as a gooseneck mic) has a red on / off button at its base. Its volume level can be changed on the touch screen.

Two radio mics are also available from the SIZ desk. They are a lapel (or clip) mic and a handheld (H/Held) traditional looking mic.

Press  on the touch panel.

Any of the mic levels can be reset to its default level by pressing its associated Reset button.

More information is available on the sheet supplied with the microphones


### TV REPEATER SCREENS

On each side of the room is a TV on a trolley. When its VGA cable is connected to the VGA socket found in the wall near the power socket and the TV is switched On, it will display the same image as seen on the monitor and projectors.

### PC



The PC is located in the lectern and must be switched on manually. Also switch on the monitor.



Press  to display the PC. The selected choice will be highlighted.

**USB** devices can be connected using the socket on the lectern panel.

### LAPTOP




You can plug a laptop into either the VGA+audio or into the HDMI connection on the connection plate next to the touch panel.

Press  OR  depending on which connection you have made.

NOTE: Devices without HDMI may require an adaptor or an extension VGA/HDMI cable. SIZ in the Learning Resource Centre has a limited number of adaptors for loan.

### DVD





DVDs can be played on the computer using **VLC**  *Player* software



For rooms that also contain a BluRay player in the lectern the DVD\BluRay source is included on the touch panel.



The DVD player can be controlled from the touch panel. The DVD player can play DVDs or Blu-Ray discs.

Press  to access the DVD controls screen Press  to play the DVD.

### TRAINING

To learn how to deliver the best learning experience using the facilities in any of the lecture rooms please contact the Skills Team. [skills@chi.ac.uk](mailto:skills@chi.ac.uk)



This can also be requested in the Self-Service area of the intranet by clicking **Support Me**, then **My IT Training** selecting "**Audio Visual Equipment Training Request**".

**For emergency help where there is a fault with the lecture system phone the SIZ on (01243 81) 6222**

For non-emergency enquiries please use the **Support Me** button in the **Self-Service** area on the intranet and select: My Teaching > IT Support (Teaching Room/Open Access)