

### DISPLAY

This is a large format touch screen which responds to either your hands or the pen usually located on the side edge of the display. The unit contains a *Windows 10* computer and an *Android* device.

### POWER

Normally, just touching the screen will bring it out of standby mode. Otherwise, use the Power button on the far right-hand side edge of the screen to switch it On, or Off when finished:



**If the screen is powered on and you still do not see anything:** ensure that the computer housed in the lower rear of the unit is switched on.

**If the computer is on already:** move the mouse or press any key on the keyboard to bring the computer out of sleep mode. This is usually shown by the screen saying: "Unable to detect your input signal"



The display screen be height adjusted using the up/down arrow buttons located on the rear of the unit just below the right-hand trolley handle.

## SWITCHING BETWEEN PC AND OTHER DEVICES

To switch between the *Windows* PC and other device sources either press the **MENU** button found below the screen's Power button (see above), or alternatively swipe upwards from the bottom of the screen to reveal the **General Setting** window.




The home screen button will take you to the **Android Home** screen

Press the cogwheel to show the **General Setting** screen with available sources

**Volume up**

**Volume Down**

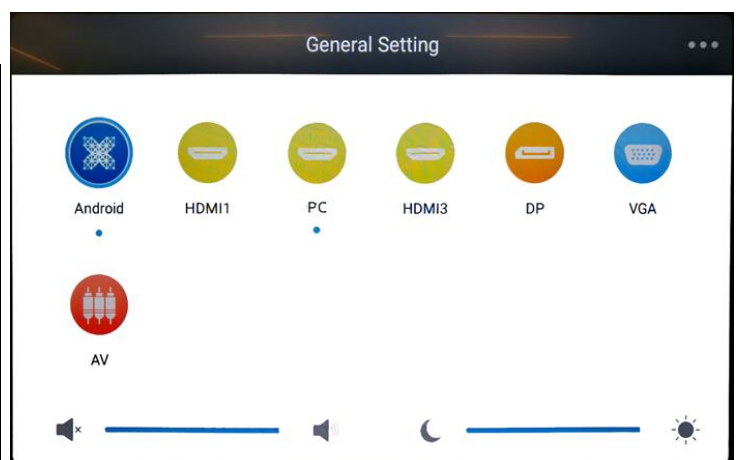

Choose a source by tapping on it. The blue dots below a source show which are currently active (i.e. available and connected). There are also volume and screen brightness controls available on the General Setting screen.

## LAPTOPS

To connect a laptop use an appropriate cable, normally HDMI, and connect your laptop to one of the vacant sockets on the right-hand side of the display. For example, connect to the socket marked HDMI 1 and then select HDMI 1 on the General Setting window to display the connected device.

---



### PEN & INTERACTIVITY

The screen is responsive to touch with a hand/finger and will register up to 20 points of contact on the screen simultaneously if you would like multiple drawers/writers to use the screen at once. There is also a special pen which can be used upon the screen. The pen is usually located on the side edge of the display.

To draw on the screen press the inward pointing arrow at the side of the screen, then choose the pen icon. You can then draw with your fingers and erase with your hand.

Drawings made on the screen can be saved but are saved to the *Android* system so you will need a USB storage device to transfer them to. See ANDROID section below.



The Home icon will jump to the *Android* system home screen. If you are using the *Windows* PC then do not press this icon unless you intend to go to *Android*.



The pen icon is used to choose a drawing pen or highlighter pen, and to select the colour of the chosen pen.



Zoom tools for: increase zoom, decrease zoom and return to full screen



The scissor icon is a screenshot button which takes a screenshot of the screen and saves it to a folder on the *Android* system of the display device. To retrieve the file you must use the *Android* system where it can be copied to a USB device.

---



### ANDROID

The Clevertouch display also contains an *Android* operating system. You can switch to the *Android* system by touching one of the Home buttons found in the on-screen menus.

The functionality of the *Android* system is too complex to be summarised here.

To learn more about how to use the *Android* side of the Clevertouch display, visit their help site (choosing Plus Series) at: <https://gettingstarted.clevertouch.com>

---



skills@chi.ac.uk

### TRAINING

To learn how to make the best use of the facilities in any of the lecture rooms please make an appointment with a member of the Skills Team.

This can be requested in Self-Service by clicking **Support Me**, then **My IT Training** and selecting "**PC/MAC/AV/Assistive Technology Training Request**".

---

**For emergency help where there is a fault with the lecture system phone the SIZ on (01243 81) 6222**

For non-emergency enquiries please use the Support Me button in the Self-Service on the intranet.

---