 




DISPLAY

This is a Clevertouch ultra-HD touchscreen display that is operated from a Crestron push-button panel BEHIND the display screen. Also behind the display USB sockets that connect to the PC in the rear of the trolley, and an HDMI socket for connecting laptops and other HDMI equipped devices.

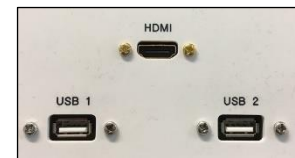

The display screen be height adjusted using the up/down arrow buttons located on the rear of the unit just below the right-hand trolley handle.

POWER

 
Switch the display on or off using the Crestron push-button panel below the display.



If there is a problem with the power, note that the mobile trolley should be connected to the power socket and the two trailing network cables should both plugged into the network sockets – white cable to socket 12, and red cable to socket 16.

NB: The Crestron push-button panel is powered by its network connection and the unit will take 30 seconds or so to initialise when the cable is first plugged in.

PC



Press **PC** on the Crestron push-button panel to choose the PC as the display source.

The computer is located in the rear of the trolley. If not already on, it will need to be switched on manually. The room should have a wireless keyboard & mouse.

USB devices can be connected using the USB sockets behind the display.

LAPTOPS AND APPLE DEVICES



To connect a laptop use an appropriate HDMI cable for your device and plug the HDMI cable into an HDMI socket behind the display. Then choose **HDMI** on the Crestron push-button panel.

If the laptop image does not appear on the screen you may need to instruct your device to output its image. In *Windows*, press the *Windows* Logo key and P key at the same time until Duplicate is selected.

For Apple Mac go to Display Properties and choose to Mirror display.



An iPad, iPhone or iPod with a Lightning port can use an HDMI adapter (aka Apple Lightning Digital AV Adapter) to connect to the system – this can be used for playing music and video you have on your device.

VOLUME

First raise the volume on the PC within *Windows* – or on your laptop – before raising the volume on the display.

Use the **VOL ▲** and **VOL ▼** buttons to adjust the **Display** volume.
To mute the volume press the **MUTE** button (its red light flashes when muted).

PEN & INTERACTIVITY



The screen is responsive to touch with a hand/finger and will register up to 20 points of contact on the screen simultaneously if you would like multiple drawers/writers to use the screen at once. There is also a special pen which can be used upon the screen. The pen is usually located on the side edge of the display.

To draw on the screen press the inward pointing arrow at the side of the screen, then choose the pen icon. You can then draw with your fingers and erase with your hand.

Drawings made on the screen can be saved but are saved to the *Android* system so you will need a USB storage device to transfer them to. See **ANDROID** section below.



The Home icon will jump to the *Android* system home screen. If you are using the *Windows* PC then do not press this icon unless you intend to go to *Android*.



The pen icon is used to choose a drawing pen or highlighter pen, and to select the colour of the chosen pen.




Zoom tools for: increase zoom, decrease zoom and return to full screen



The scissor icon is a screenshot button which takes a screenshot of the screen and saves it to a folder on the *Android* system of the display device. To retrieve the file you must use the *Android* system where it can be copied to a USB device.

 ANDROID



The Clevertouch display also contains an *Android* operating system. You can switch to the *Android* system by pressing either the **PC2** button on the Crestron push-button panel or by touching one of Home buttons found in the on-screen menus.

The functionality of the *Android* system is too complex to be summarised here.

To learn more about how to use the *Android* side of the Clevertouch display, visit their help site (choosing Plus Series) at: <https://gettingstarted.clevertouch.com>

TRAINING



skills@chi.ac.uk

To learn how to make the best use of the facilities in any of the lecture rooms please make an appointment with a member of the Skills Team.

This can be requested in Self-Service by clicking **Support Me**, then **My IT Training** and selecting "**PC/MAC/AV/Assistive Technology Training Request**".

For emergency help where there is a fault with the lecture system phone the SIZ on (01243 81) 6222
For non-emergency enquiries please use the **Support Me** button in the Self-Service on the intranet.
