

DISPLAY SCREEN

The Display Screen is switched on/off using the **AMX** push-button control panel on top of the lectern.



Press the **ON/OFF** button  to switch on the display.

Turn display screen off after use


If no class is following on immediately from yours then please switch off the system.

Press the **ON/OFF** button  to switch off the display.

PC

A computer is located inside the lectern and must be switched on manually as must the monitor on top of the lectern.




Press the **PC** button  on the AMX push-button panel to have the computer displayed on the big screen.

LAPTOP


Use the HDMI cable protruding from the console.



On the AMX push-button panel press the **HDMI** button  to select the HDMI source to be displayed on the big screen.

For devices lacking an HDMI socket an adaptor will be required. The SIZ desk has a limited stock of adaptors for loan which may suit your device.

Volume & Other Controls

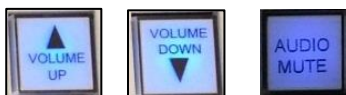

The display's speaker volume can be raised, lowered, and muted by using the corresponding button on the AMX push-button panel.

For emergency help where there is a fault with the lecture system contact the SIZ desk
For non-emergency enquiries please use the Support Me button in the Self-Service on the intranet.