


PROJECTOR

The Projector is switched on using the AMX control panel on top of the lectern.




Press the  button to switch on the projector.
Wait for 30 seconds for the projector to warm up.

Turn projector off after use

If no class is following on immediately from yours then please switch off the system.



Press the  button to switch off the projector.

Note that the projector cannot be switched On again until it has finished cooling down.



APPLE MAC

The power button is on the rear.
USB sockets can be found on the rear.

NB: The screen resolution of the Mac is far superior to that of the projector. The projector works best with resolutions of 1280x800, 1280x720. Using higher resolutions may result in a poor or lost picture on the projector.



LAPTOP

Use the HDMI cable protruding from the console – when a device is active on this cable the signal will over-ride that of the Apple Mac.

For devices lacking an HDMI socket an adaptor will be required. The SIZ desk has a limited stock of adaptors for loan which may suit your device.



hide/unhide projector image



mute/unmute speakers



raises projector volume



lowers projector volume

Volume & Other Controls

If there is no sound, check that the speakers are switched on – one of the speakers has an on/off switch underneath it.

If low volume or buzzing, first raise the Mac's volume (top-right of the screen) before using the Volume buttons to raise the volume of the projector's speakers.

NB: the Smartboard in this room is not interactive.

For emergency help where there is a fault with the lecture system contact the SIZ desk

For non-emergency enquiries please use the Support Me button in the Self-Service on the intranet.